

## Operating the TDL Electronic Lock



### Getting started

The keypad may not have batteries fitted.

- To open the cabinet, remove the cover plate at the bottom of the circular keypad (See red arrow)
- Insert and turn the supplied emergency key and pull the door open.
- Remove the black battery cover on the inside of the door and load 4pcs 1.5V AA Alkaline batteries.
- Replace the battery cover.

### Codes and User

This lock has 2 user codes; Master and Personal. The defaults are, Master code '8 8 8 8 8 8' and Personal code '1 2 3 4 5 6'.

### How to lock/open my cabinet?

- After insertion of batteries, enter either the Personal or Master codes then 'Lock' to lock the cabinet. **Thereafter:**
- To lock the cabinet, close the door and press 'Lock' and the door will automatically lock, and the display will show 'Closed'.

**Note** If you attempt to lock the safe by entering a code and then 'Lock' the display will show 'error' and sound 'Bi Bi'.

- To open the cabinet, enter either the Master or Personal codes and the bolts will withdraw, and the display will show 'Opened'. The door can now be pulled open.

### How to set my own Personal code?

**We recommend that you perform this complete procedure with the door open.**

- With the door open and the display showing 'Opened' press 'Clear' twice. The display will show 'Prog'
- Enter '68' then 'Lock', the display will show 'neu'
- Enter your new Personal code and 'Lock' the display will show 'Closed' and the door will lock meaning the new number has been successfully set.
- Check the new code operation before locking cabinet.

### How to set my own Master code?

**We recommend that you perform this complete procedure with the door open.**

- With the door open and the display showing 'opened' press 'Clear' twice. The display will show 'Prog'
- Enter the default code '8 8 8 8 8 8', the display will show 'neu'
- Enter your new Master code and the display will show 'again'.
- Enter your new Master code once more and the display will show 'done' meaning the new number has been successfully set.
- Check the new code operates before locking cabinet.

**Note** If at any time you are unable to open the safe using the keypad, remove the cover plate at the bottom of the circular keypad to use the supplied emergency key where indicated.

**Do not store your emergency key inside the safe!**

### When to replace the batteries?

If the door does not open despite entering the correct user code, seeing a constant LED and hearing a melodic tone, it indicates that the battery output is not strong enough to actuate the solenoid. At this point all four batteries should be replaced with new AA alkaline batteries.

### IMPORTANT.

**Default Master and Personal codes must be changed immediately upon safe installation.**