

# Total Locker Service




## Fitting Instructions

Parts included:

- 2 x Buggy Lock boards complete with 2 locks per board
- 4 x 2.5" screws (2 per board)
- 4 x Rawl plugs (2 per board)
- 1 x Master key
- 2 x Keys per lock

Tools required:

1. Drill/Driver
2. Spirit level
3. Tape measure
4. Protective eyewear
5. Awl (optional)

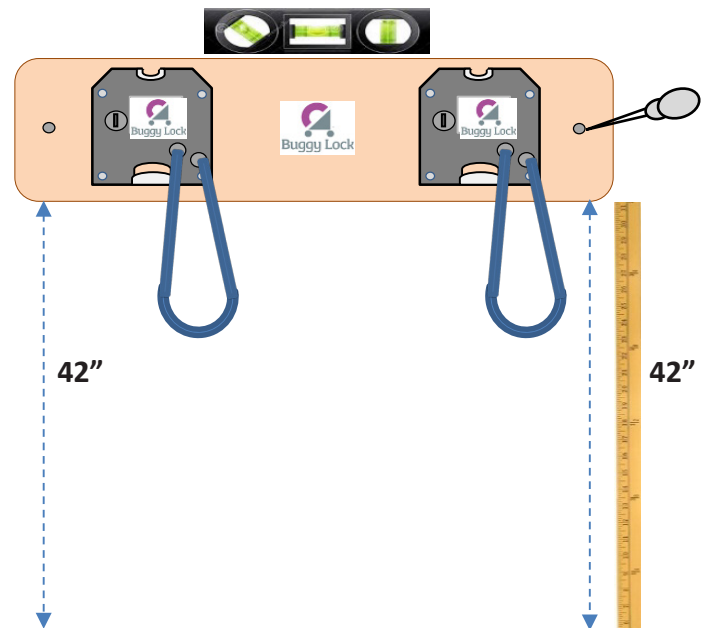

Buggy Lock dimensions: 600mm (W) x 145mm (H) per board

### Step 1

Position the bottom of the Buggy Lock 42" (1067mm) from the floor level to establish the fixing height

### Step 2

Use an awl or small drill within the backboard screwholes to mark the wall with the drilling centres

### Step 3

Drill the wall to accommodate the rawl plugs (provided), then tap the rawl plugs into the drilled holes

### Step 4

Align the Buggy Lock back board with the drilled holes and secure to the wall with the screws (provided)

### Step 5

Repeat the above steps to install the second board

We recommend that you allow some space (minimum of 185mm) between each Buggy Lock board to accommodate a variety of buggy sizes.